

Audi-4G-PAS

- MODEL : AD-4G-PAS-150211
- DATE : 2020.02.09



GU ELECTRONIC

Index

1. Main Spec
2. Block Diagram
3. Dimension
4. External Appearance
5. Connector Pin Assignment
6. Product Composition
7. DIP S/W Setting
8. Mode Change
9. OSD(On Screen Display) Control
10. Install Manual
11. Q & A

1. Main Spec.

1. Input Spec. (MULTI VIDEO INTERFACE)

- 1 x Analog RGB Input (Navigation System output)
- 1 x CVBS(REAR CAMERA) Input. (Rear camera source)
- 1 x CVBS(FRONT CAMERA) Input. (Front camera source)
- 1 x LVDS Input. (Car Command System)

2. Output Spec.

- 1 x LVDS Output (LCD Operation)


3. Power Spec.

- Input Power : 8VDC ~ 24VDC
- Consumption Power : 12Watt, Max

4. Switch Input mode

- Possible to select CAR model while switching mode by DIP S/W
- By button on the Commander in the car via CAN

2. Block Diagram

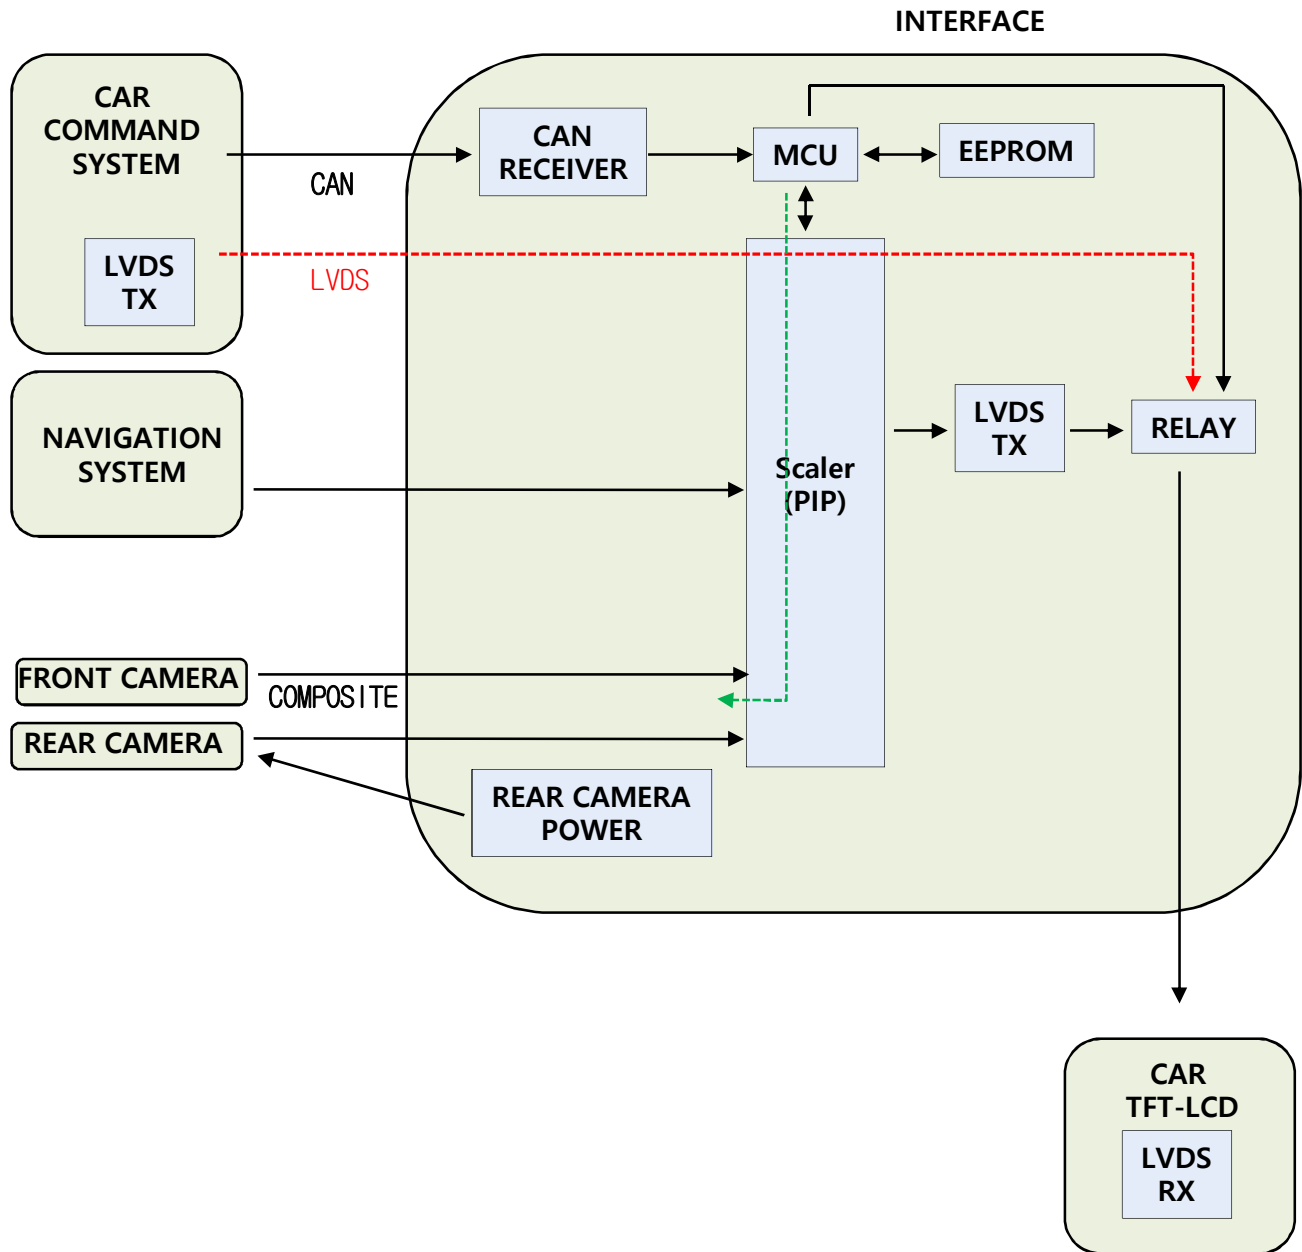


3. Dimension

136.5mm * 87.5mm * 27mm




* This can change under manufacturer's circumstance


4. External Appearance

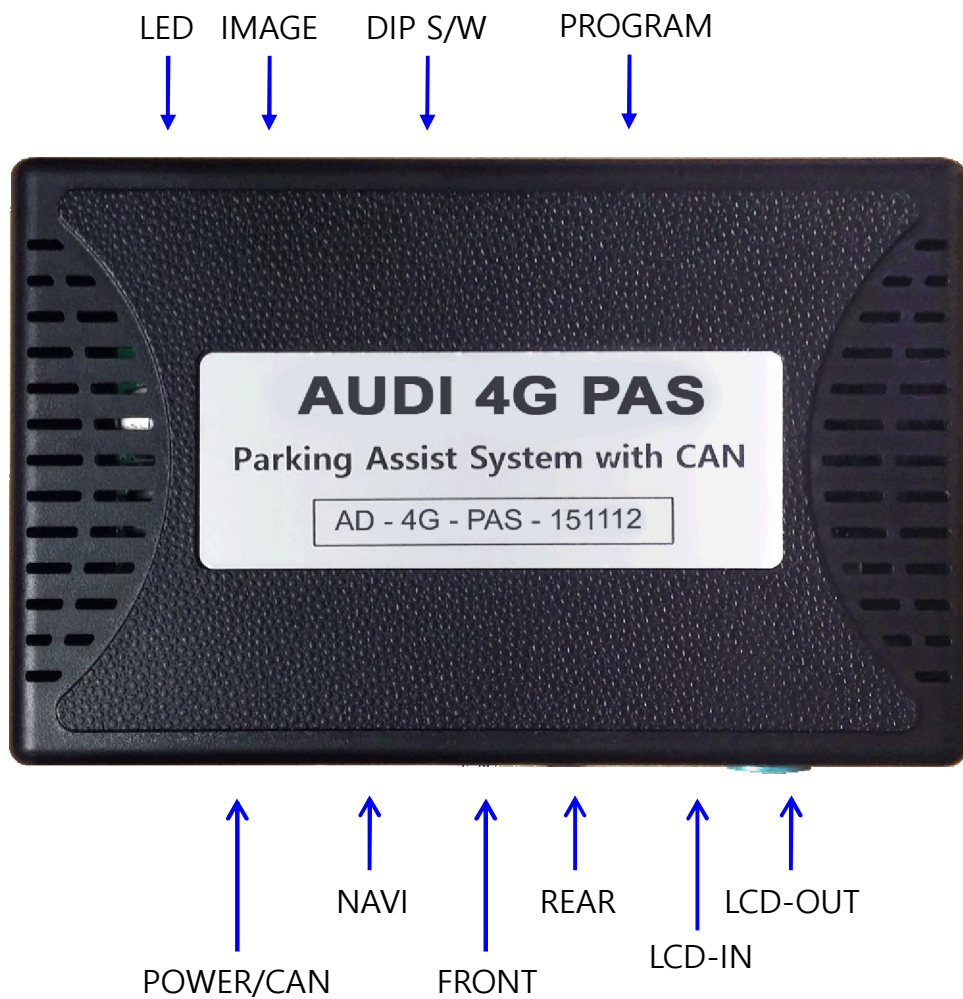

4. External Appearance

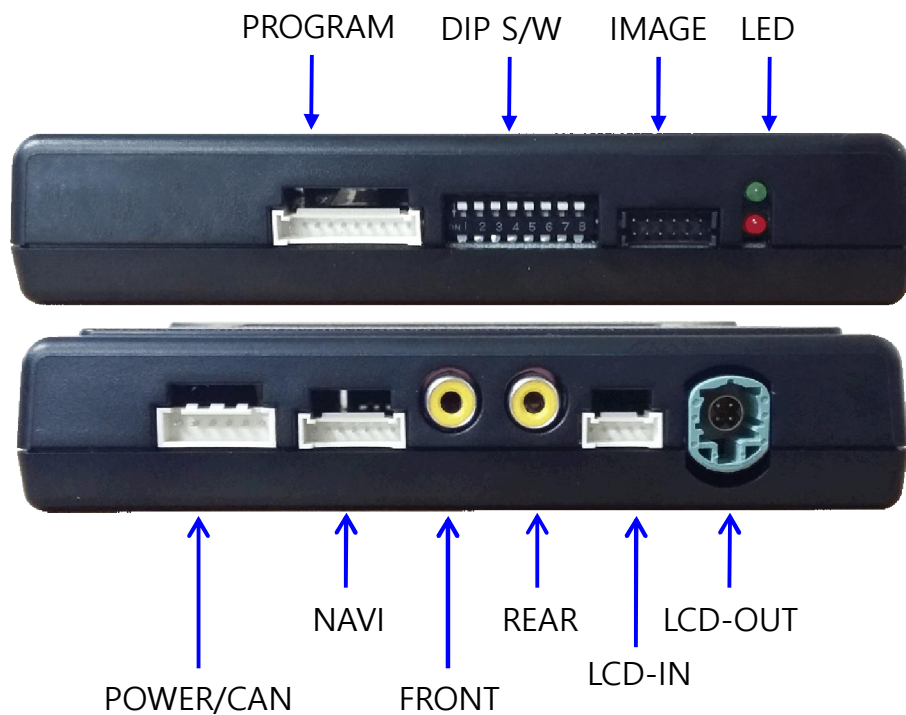

5. Connector Pin Assignment

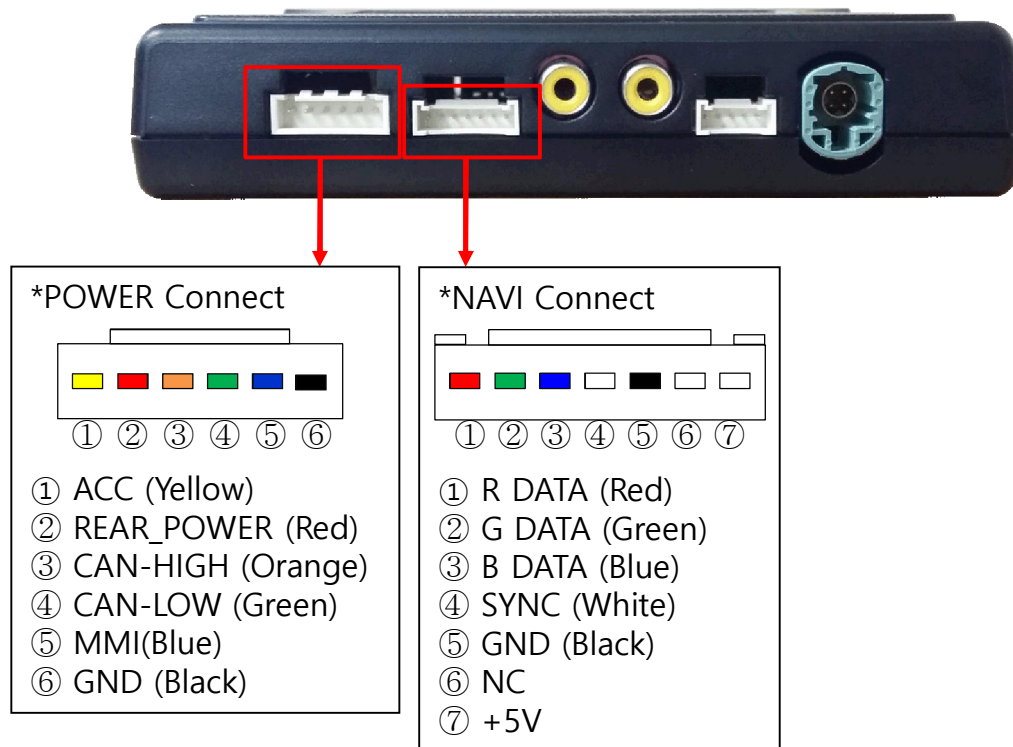

6. Product Composition




Interface 1 EA



Rear Detect Cable 1 EA




Power Cable 1 EA

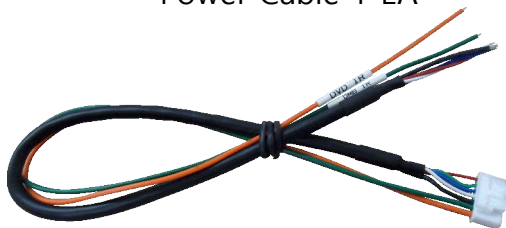

RGB NAVI Cable(7pin) 1 EA



OSD Board 1 EA

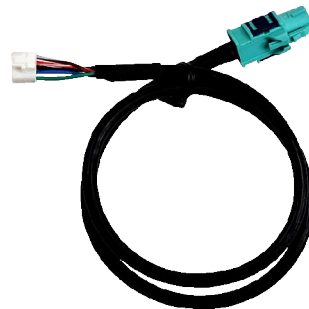

LVDS Cable 1 EA



GU Electronic

7. DIP S/W Setting

* ON : DOWN , OFF : UP

PIN	FUNCTION	DIP S/W Selection
1	NAVI	ON : Not Used OFF : Used
2	VIDEO	ON : Not Used OFF : Used
3	N.C	
4	N.C	
5	CAR type SEL	Right Picture
6		
7		
8		

* DIP S/W Example



Audi_A3_5.8"



Audi_A3_7.0"



Audi_A4/Q7_7.0"



 
Audi_A6_8.0"



Audi_TT_12.0"



Audi_Q2_2017year_7.0"

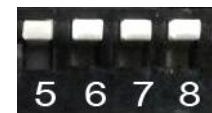

Volkswagen_Golf_5.8"



Volkswagen_Polo_6.5"



Volkswagen_Golf_6.5"



Volkswagen_Golf_8.0"



Volkswagen_Tiguan_8.0"

8. Mode Change


Mode Change SteeringWheel for Audi A3/A6/A7/Q7/TT



MENU	Option / SteeringWheelBtn	NAVI
Config	SteeringWheelBtn	MODE NAV OFF
Option	SteeringChannel	Off
Image	Camera	Rear
Screen	Reset	Execute Cancel
Parking		

- To use the Steering button You must select the "MODE" or "NAV" button in the menu.
- Select "OFF" when not in use.

 Mode Change MMI Button for Audi A6/A7

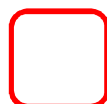

mode change(1 second)



Return OEM display



GU Electronic

8. Mode Change

Mode Change SteeringWheel for Volkswagen Golf7/Polo



- To use the Steering button You must select the "MUTE" or "DOWN" button in the menu.
- Select "OFF" when not in use.

MENU	Option / SteeringWheelBtn	NAVI
Config	SteeringWheelBtn	MUTE DOWN OFF
Option	SteeringChannel	Off
Image	Camera	Rear
Screen	Reset	Execute Cancel
Parking		

8. Mode Change

Mode Change SteeringWheel for Volkswagen Tiguan



MENU	Option / SteeringWheelBtn	NAVI
Config	SteeringWheelBtn	MUTE DOWN OFF
Option	SteeringChannel	Off
Image	Camera	Rear
Screen	Reset	Execute Cancel
Parking		

- To use the Steering button You must select the "DOWN" button in the menu.
- Select "OFF" when not in use.


8. Mode Change

Mode Change StreeingWheel for Porsche PCM4.0




MENU	Option / SteeringWheelBtn	NAVI
Config	AV Out	USER
Option	Deck Button	Setup
Image	SteeringWheelBtn	ON OFF
Screen	SteeringChannel	Off
Parking	UI DVB-T(DMB)	On

- To use the Streeing button You must select the "ON" in the menu.
- Select "OFF" when not in use.

 mode change(1 second)

MENU	Option / SteeringChannel	NAVI
Config	AV Out	USER
Option	Deck Button	Setup
Image	SteeringWheelBtn	OFF
Screen	SteeringChannel	On Off
Parking	UI DVB-T(DMB)	On

- To use the Streeing button You must select the "ON" in the menu.
- Select "OFF" when not in use.

 DVB-T channel up/down in the DVB-T mode.

9. OSD(On Screen Display) Control

OSD control



MENU	Press to display when there is no OSD screen. When OSD screen is on, press it to EXIT or OFF.
SEL	Item Selection, Value Selection
UP	Item up Increase selected value
DOWN	Item down Decrease selected value

Mode State		
MENU	Option	
Config	RearCam-Type	ExtDevice
Option	RearCam-Power	Auto
Image	RearCam-Det	GEAR
Screen	AV Mode	Off
Parking	FrontCam-Type	ExtDevice
First Menu	Second Menu	Third Menu

9. OSD(On Screen Display) Control

OSD Config

First Menu	Second Menu	Third Menu	Description
Config	NAVI-RGB	DIGITAL-INAVI :	Setting the Connected NAVI Model
	VIDEO	ELT_DVBT20 :	Setting the Connected DVB-T Model
	RearCam	AVM VIDEO :	Setting the Connected RearCam Model
	Reset	Execute	Reset to default value of Config menu

MENU	Config NAVI	
Config	NAVI-RGB	DIGITAL-INAVI
Option	DVB-T(DMB)	ELT_DVBT20
Image	DVD	ELT-980XU Slim
Screen	Reset	Execute Cancel
Parking		

10. OSD(On Screen Display) Control

OSD - Option Menu

First Menu	Second Menu	Third Menu	Description
	RearCam-Type	OEM	Original Camera
		ExtDevice	Equipped with external camera
	RearCam-Power	ON	+ 12V continuous supply
		AUTO	+ 12V supply only in Rear camera mode
		OFF	+ 12V off
	RearCam-Det	GEAR	Detected by CAN
		WIRE	Detected by Rear-Det Wire
	FrontCam-RcvOpt	ON	After RearCam shows FrontCam and returns to previous state
		OFF	Disable feature
	Deck Button	MENU	"MENU" Switching screen by using Screen button
		SETUP	"SETUP" Switching screen by using Screen button
	SteeringWheel Btn	MODE	"Mode" Switching screen by using Steering wheel button
		NAV	"Nav" Switching screen by using Steering wheel button
		OFF	Do not use features.
	Steering Channel	ON	Use DVB-T Channel Up / Down with Steering wheel button
		OFF	Do not use features.
	Camera	On	Video(CVBS) Input Hardware Port - Front
		Off	Disable feature
	Reset	Execute	Option Menu all Reset

9. OSD(On Screen Display) Control

Rear Detect control

MENU	Option / RearCam-Det	REAR
Config	RearCam-Type	ExtDevice
Option	RearCam-Power	Auto
Image	RearCam-Det	PDC GEAR ExtWire
Screen	FrontCam-Type	ExtDevice
Parking	FrontCam-Power	Auto



Car Audio Box Button



MENU	Option / RearCam-Det	REAR
Config	RearCam-Type	ExtDevice
Option	RearCam-Power	Auto
Image	RearCam-Det	PDC GEAR ExtWire
Screen	FrontCam-Type	ExtDevice
Parking	FrontCam-Power	Auto



Gear



GU Electronic

9. OSD(On Screen Display) Control

OSD Option -> FrontCam-RcvOpt


Front Camera Auto Mode

0 second = FrontCam-RcvOpt menu OFF

1~30 second = FrontCam-RcvOpt menu ON & time control

MENU	FrontCam-RcvOpt NAVI	
Config	FrontCam-Power	Auto
Option	FrontCam-Det	ExtWire
Image	FrontCam-RcvOpt	0s
Screen	Steering Wheel	Voice
Parking	Reset	Execute Cancel

MENU	FrontCam-RcvOpt NAVI	
Config	FrontCam-Power	Auto
Option	FrontCam-Det	ExtWire
Image	FrontCam-RcvOpt	30s
Screen	Steering Wheel	Voice
Parking	Reset	Execute Cancel

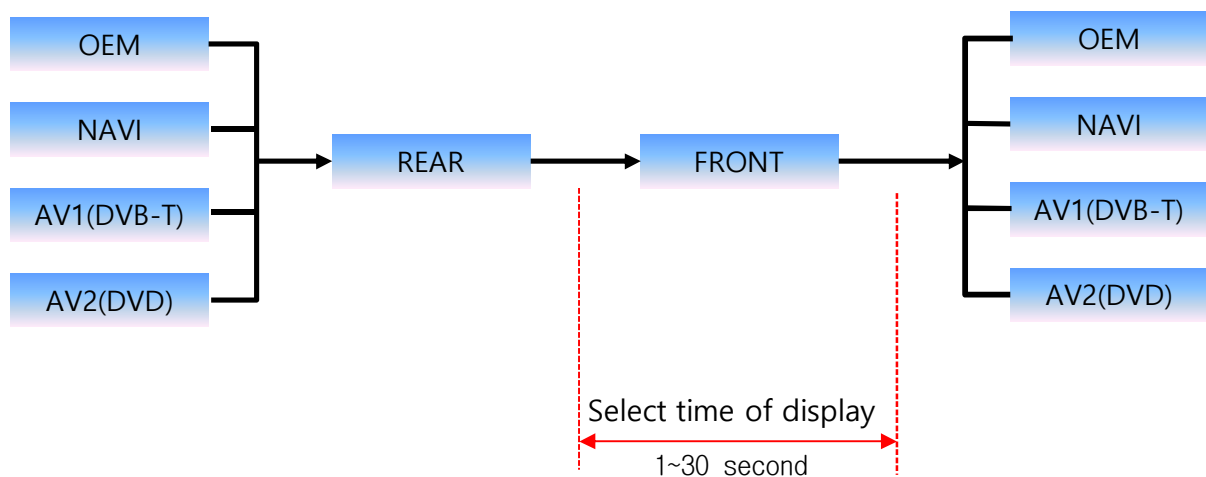

9. OSD(On Screen Display) Control

NAVI-RGB menu

First Menu	Second Menu	Third Menu	Action
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Color-RED		Adjust the value of RED
	Color-GREEN		Adjust the value of GREEN
	Color-BLUE		Adjust the value of BLUE
	Reset	Excute	Option Menu all Reset

DVD,DVB-T(DMB),NAVI-AV,REAR,FRONT menu

First Menu	Second Menu	Third Menu	Action
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Saturation		Adjust the value of Saturation
	Hue		Adjust the value of Hue
	Sharpness		Adjust the value of Sharpness
	Reset	Excute	Option Menu all Reset



<< Brightness >>



<< Contrast >>



<< Saturation >>



GU Electronic

9. OSD(On Screen Display) Control

OSD – Screen Menu

First Menu	Second Menu	Third Menu	Description
Screen	Horizontal		Output screen horizontal movement
	Vertical		Output screen vertical movement
	Scale X Up		Reduce / increase output screen width
	Scale X Down		
	Scale Y Up		Reduce / Increase Output Screen Height
	Scale Y Down		
	Reset		Screen menu all reset

MENU	Horizontal	NAVI
Config	Horizontal	50
Option	Vertical	50
Image	Scale X Up	50
Screen	Scale X Down	50
Parking	Scale Y Up	50

9. OSD(On Screen Display) Control

OSD – Parking Menu

First Menu	Second Menu	Third Menu	Description
Parking	Line Display	ON	Show parking line
		OFF	Do not show parking lines
	OPS Display	ON	Show OPS
		OFF	Do not show OPS
	Grid Type	Full	Do not show OPS
		SPLIT	Show OPS
	Warnings Lang		Set warning text language
	Horizontal		Moving a parking line horizontally
	Vertical		Moving a parking line vertically
	Transparency		Parking line transparency
	Reset		Parking menu all reset

MENU	Parking / Line Display		REAR
Config	Line Display	On	Off
Option	PDC Display	On	
Image	Grid Type	Split	
Screen	Warnings Lang	English	
Parking	Horizontal	<div><div></div></div>	50

9. OSD(On Screen Display) Control

OSD Parking – OPS Display On / Off

MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	Off
Image	Grid Type	Full	
Screen	Warnings Lang	English	
Parking	Horizontal	 50	




OPS ON Screen

MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	Off
Image	Grid Type	Full	
Screen	Warnings Lang	English	
Parking	Horizontal	 50	




OPS OFF Screen

OSD Parking – Guide line On / Off

MENU	Parking / Line Display		REAR
Config	Line Display	On	Off
Option	PDC Display	On	
Image	Grid Type	Split	
Screen	Warnings Lang	English	
Parking	Horizontal	 50	



Parking Line ON Screen

MENU	Parking / Line Display		REAR
Config	Line Display	On	Off
Option	PDC Display	On	
Image	Grid Type	Split	
Screen	Warnings Lang	English	
Parking	Horizontal	 50	



Parking Line OFF Screen



GU Electronic

9. OSD(On Screen Display) Control

OSD Parking – OPS Display On / Off

MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	
Image	Grid Type	Full	Split
Screen	Warnings Lang	English	
Parking	Horizontal	 50	



MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	
Image	Grid Type	Full	Split
Screen	Warnings Lang	English	
Parking	Horizontal	 50	



9. OSD(On Screen Display) Control

OSD Parking – Change warning language

MENU	Parking / Warnings Lang	REAR
Config	OPS Display	English
Option	Line Display	中文
Image	Warnings Lang	한국어
Screen	Horizontal	台灣
Parking	Vertical	Р о с с и я

English

Check entire surroundings!

中文

请注意车辆周围环境!

한국어

차량 주변을 전부 확인

台灣

請注意車輛周圍環境!

Р о с с и я

Следите за всем окружением автомобиля!

日本

周辺の安全を確認



GU Electronic


9. OSD(On Screen Display) Control

OSD Parking – Adjust position of parking guide line

MENU	Parking	REAR
Config	OPS Display	Off
Option	Line Display	On
Image	Warnings Lang	English
Screen	Horizontal	50
Parking	Vertical	50

Possible to adjust the position of parking guide line
by Keypad in Horizontal / Vertical menu

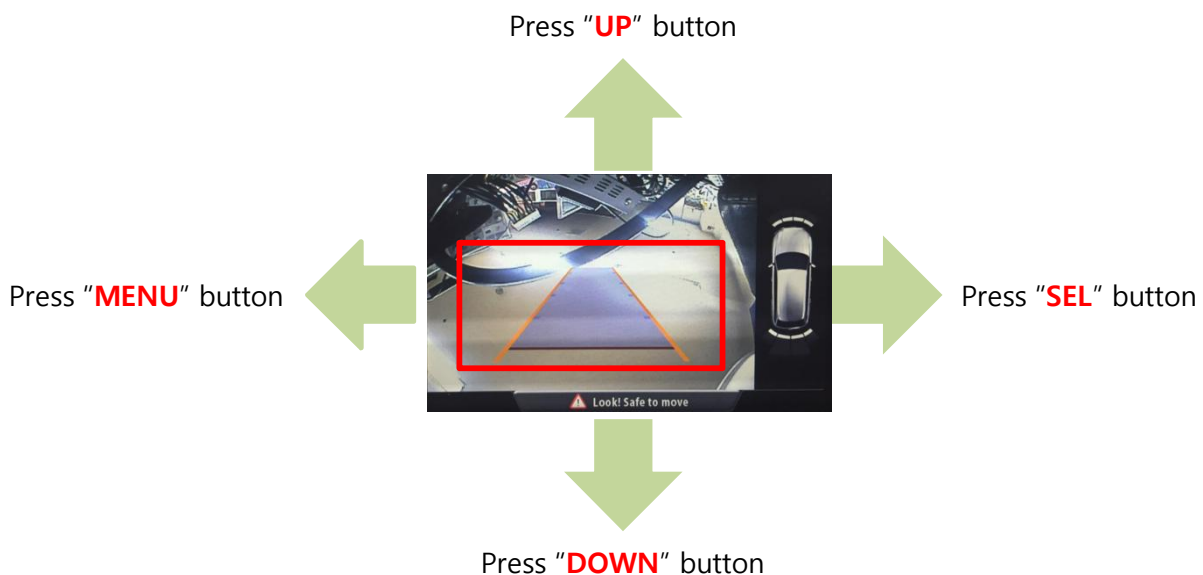


※ Pressing this Horizontal / Vertical menu,
The OSD screen automatically disappears.
Please adjust from the parking line Screen.



9. OSD(On Screen Display) Control

OSD – OSD Menu

First Menu	Second Menu	Third Menu	Description
OSD	Horizontal	<i>value</i>	OSD Menu Horizontal Shift
	Vertical	<i>value</i>	OSD menu vertical Shift
	Display Time	<i>value</i>	OSD Menu Display Time (in seconds)
	Transparency	<i>value</i>	OSD menu transparency
	Language		OSD menu display language
	Reset	Execute	Initialize OSD settings


MENU	Horizontal DVB-T	
OSD	Horizontal	 50
IR-Ctrl	Vertical	 50
Utility	Display Time	 10s
	Transparency	 30
	Language	English
MENU	Reset DVB-T	
OSD	Reset	Execute Cancel
IR-Ctrl		
Utility		

9. OSD(On Screen Display) Control

OSD – Utility Menu

First Menu	Second Menu	Third Menu	Description
Utility	Factory Reset	Execute	Initialize all settings
	Version		FDSYOOKRX-180209 (Check for future upgrades)

Last Source : FDSYOOKRX-180209

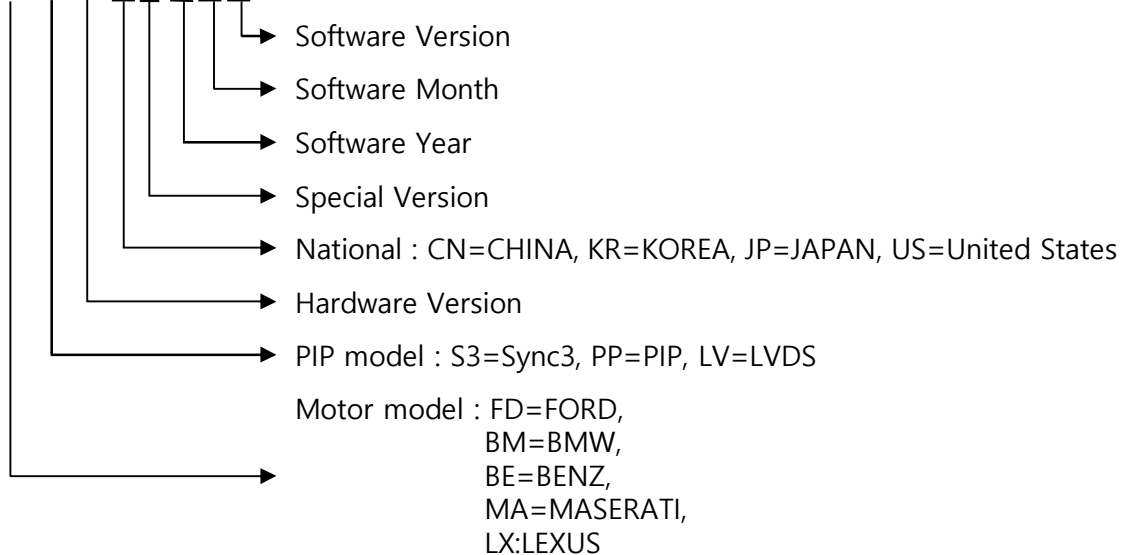


MENU	Utility	NAVI
OSD	Factory Reset	Execute Cancel
IR-Ctrl	Version	FDSYOOKRX-180209
Utility		



GU Electronic

10. Install Manual

1. Installation External Reverse(Rear) Camera Connection



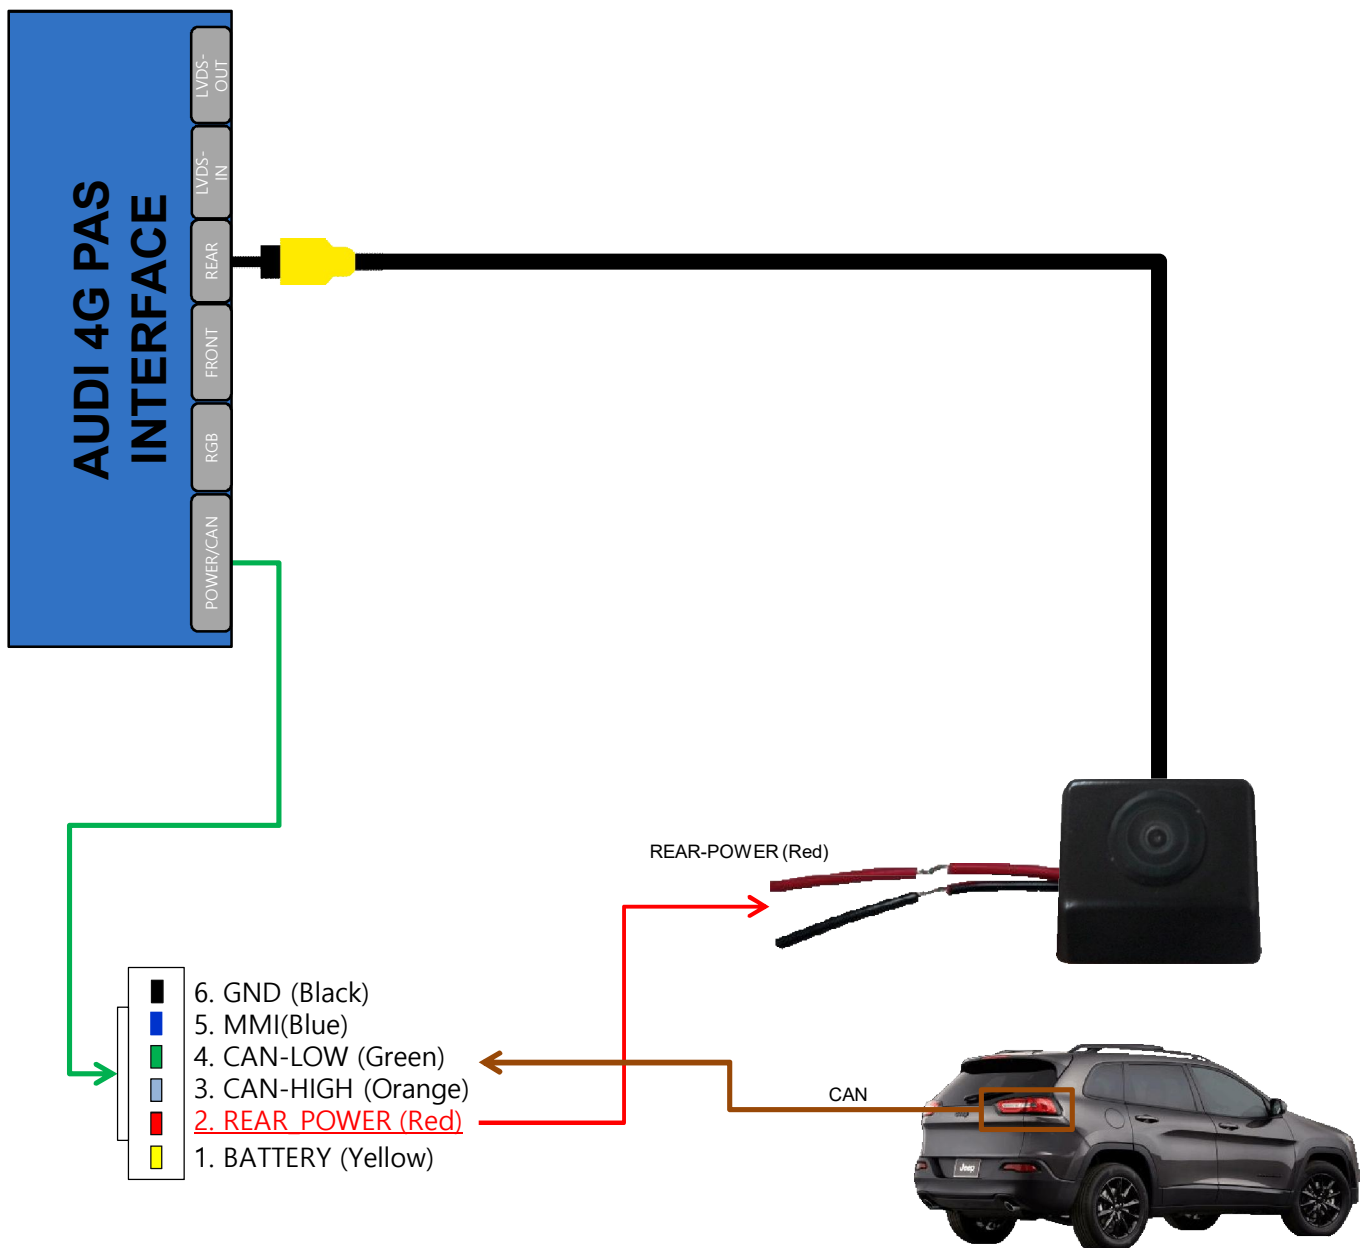


10. Install Manual

2. Installation LVDS connection


Must be gray

Do not use blue, green

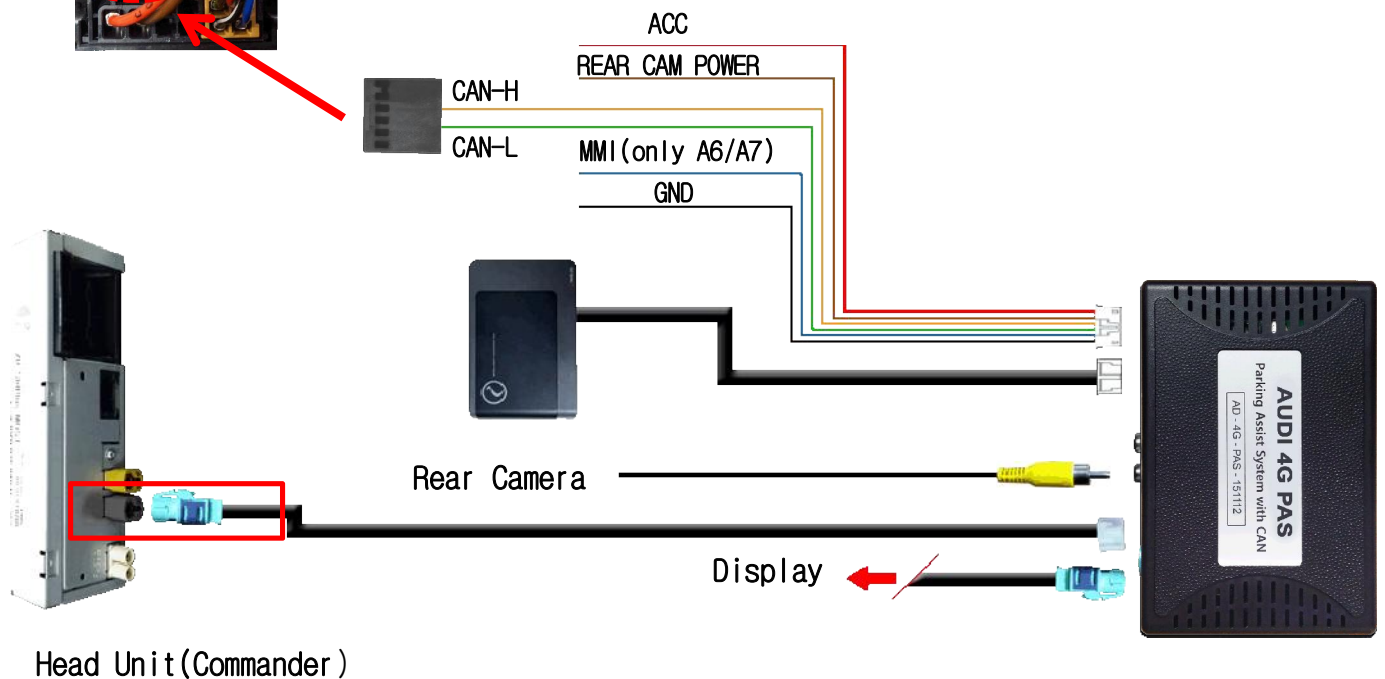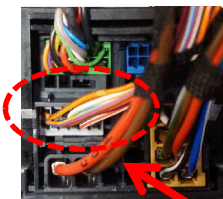
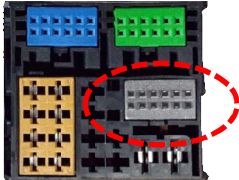


10. Install Manual


3. Installation CAN connection

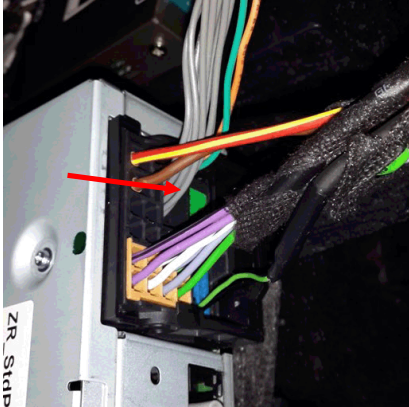

Remove the original gray connector.

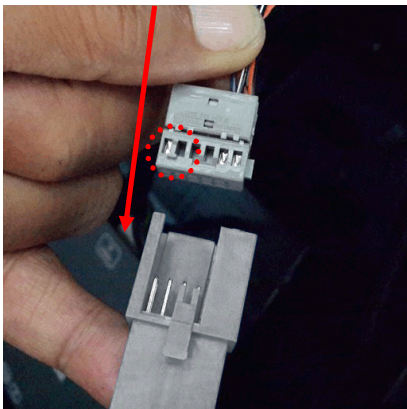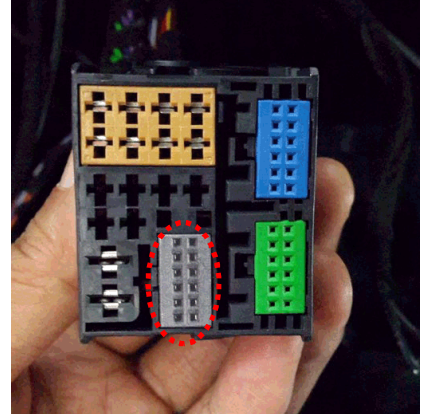

Attach the connector carefully to the locking part.

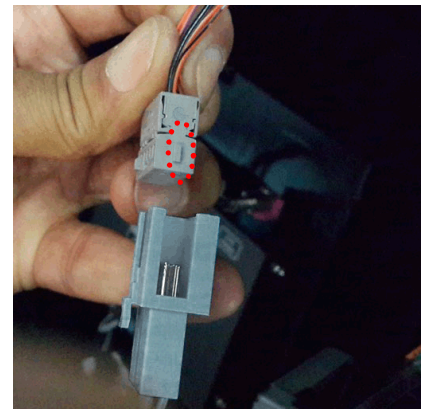

11. Q & A

FAQ

1. Not possible to switch mode
 - Check connection of OSD Key pad wire
 - Check CAN connection
2. Display wrong size of picture
 - Check Dip s/w setting
3. Display black screen in OEM mode
 - Check connection of LVDS/LCD cable
4. Not possible to switch to rear screen
 - Check the packing setting (OSD Menu – option – RearCam-Det)

Caution

1. The device must not be installed in where it interferes driving
(close to brake pedal, steering wheel, airbag etc.)
2. LVDS cable must be connected correctly according to the manual
3. Insulate the end of wire by using electrical tape
4. The installation should be done by expert
5. GU electronic does not take any responsibility for any problem caused by wrong installation
- .