Instruction Manual

BMW APIX PAS for BMW



INDEX

Specifications

1.	Main Spec./Feature	3
2.	Diagram	4
3.	Components	5
4.	Exterior	6

Settings

1.	Dip Switch	7
2.	OEM button	9
3.	Key board	13
4.	OSD Menu	13

Installation

1.	Diagram	21
2.	6.5" Monitor	22
3.	8.8" Monitor	23

Caution

1.	FAQ	24
2.	Caution	24



1. Main Spec.

- 1-1 Input Spec. (MULTI VIDEO INTERFACE)
 - 1 x Analog RGB Input (Navigation System output)
 - 1 x CVBS(REAR CAMERA) Input. (Rear camera source)
 - 1 x CVBS Input. (DVB-T/DVD/DVR/Front camera source)
 - 1 x LVDS Input (Car command sysemm)
- 1-2 Output Spec.
 - 1 x LCD Output (LCD Operation)
- 1-3 Power Spec.
 - Input Power : 8VDC ~ 24VDC
 - Consumption Power : 12Watt, Max
- 1-4 Switching mode
 - Possible to switch input mode by OEM button

2. Features

- No need to cut any OEM wires (Providing Plug&Play cable)
- Display dynamic PAS (Parking assistance system) with PDC
- Possible to register IR code of DVD/DTV



3. Diagram





4. Components









1. Dip Switch * ON : DOWN , OFF : UP

NO.	Function	Selection		
1	NAVI	ON : Skip OFF : Display		
2	DVB-T	ON : Skip OFF : Display		
3	DVD	ON : Skip OFF : Display		
4	MHL	ON : Skip OFF : Display		
5				
6	Car model	Pafar to the nictures below		
7				
8				

* Example



F20 6.5"



X3,X4 8.8" (Made in Hungary)





F15 10.2"

GU Electronic





MINI 6.5"



F30 8.8"



1. Dip Switch- DVB-T, DVD Setting

% The "Front input" can be used for DVD or DTV input (AV1 : DTV, AV2: DVD – Possible to install only one of them)

- AV1 Setting - For DTV



No.2: Off / No.3: On DVB-T UI On/Off (Refer to P15) (Dip no.3 should be ON (Skip) Otherwise AV2 screen will appear)



- AV2 Setting – For DVD



No.2: On / No.3: Off DVD UI On/Off (Refer to P15)

((Dip no.2 should be ON (Skip) Otherwise AV1 screen will appear.)





2. OEM button – Switching, PIP function





DTV Channel Up / Down



<Steering wheel>



MINI

Normal

-Switching

1 : Press long -> Switching mode Press short-> Switching to OEM directly



<Car Audio Button>

- PIP function

2 : Press long to activate PIP function





2. OEM button - Direction for Controlling DVB-T, DVD



[6.5" I-DRV]

- ① PUSH : Selection
 - Activating DVD/DTV menu
- Moving toward the left
- ③ Moving toward the right
- ④ Moving up
- (5) Moving down



[8.8" I-DRV]

① PUSH : Selection

Activating DVD/DTV menu

- Moving toward the left
- Moving toward the right
- ④ Moving toward the left
- (5) Moving toward the right
- 6 Moving up
- ⑦ Moving down

GU Electronic

2. OEM button - DVB-T, DVD Menu

*Control the menu below by OEM button

• DTV (Select the type of I-con)



• DVD



X To use this function, It is necessary to offer the remote IR code to manufacturer or setting OSD IR - Ctrl (P. 19)



2. OEM button – OSD Menu







- OPTION : Press long(6sec) Activating OSD menu Press short - Exit
- 1 PUSH : Selection
- Moving up, Increasing value
- ③ Moving down, Decreasing value
- ④ Moving from third menu to first menu in order
- (5) Moving from first menu to third menu in order
- 6 Moving up, Increasing value
- ⑦ Moving down, Decreasing value



3. OSD Key board



MENU : Activating OSD Menu
 SEL : Selection
 Up : Moving upward / increasing value
 Down : Moving downward / decreasing value

4. OSD Menu

%Press "MENU" button on Key board

MENU	С	NAVI	
Config Option Image Screen Parking	NAVI-RGB DVB-T(DMB) DVD MHL Reset	BF500G NET-700 ELT_980XU Galaxy Execute	Slim Cancel

Config - NAVI-RGB : Setup for the type of RGB

Config - DVB-T(DMB) : Setup for the type of DVB-T(DMB)

Config – DVD : Setup for the type of DVD

Config – MHL : Setup for the type of MHL

Reset : Reset all value



4. OSD Menu

%Press "MENU" button on Key board

MENU	Option / Rear Cam	- Det NAVI
Config	Rear Cam - Type	ExtDevice
Option	Rear Cam - Power	Auto
Image	Rear Cam - Det	PDC GEAR WIRE
Screen	Front Cam -Type	ExtDevice
Parking	Front Cam -RcvOpt	Auto

Option

- RearCam-Type : Setup for rear camera ExtDevice - External rear camera OEM - Original camera
- RearCam-Power : Setup for Rear VCC wire in power cable ON - +12V out always (current consumption : 200mA) AUTO - +12V out in rear mode only (200mA) OFF - Power OFF
- RearCam-Det : Setup for Rear detection P>>, GEAR : by CAN wire Ext Wire : by 12V wire

Setting to display screen when switching to the D gear from the R gear

- P>> : OEM type When switching to the D gear from the R gear , press
- the activated "P" button or driving up 20km to display AV/RGB/OEM screen GEAR : Normal type - When switching to the D gear from the R gear, The AV/RGB/OEM screen is display right away
- FrontCam-Type : Setup for front camera ExtDevice - External rear camera
 - OEM Original camera
- FrontCam-RcvOpt : Selecting time of displaying Front camera before switching to RGB, DVD, OEM from Rear camera



4. OSD Menu

%Press "MENU" button on Key board

MENU	Option / BookMarkBtn NA		
Config Option Image Screen Parking	SteeringWheelBtn BookMarkBtn UI DVB-T (DMB) UI DVD Reset	Off On On Execute	Off Cancel

Option

- SteeringWheelBtn : Setting Handle wheel button ON or OFF
- BookMarkBtn : Setting Car Audio Button No.8 ON or OFF (P.8)
- UI DVB-T(DMB) : Setting UI ICON ON or OFF
- UI DVD : Setting UI ICON ON or OFF
- Reset : Reset all value



4. OSD Menu

%Press "MENU" button on Key board

- NAVI(RGB) Image / Screen

MENU	IMAGE NAVI		
Config Option Image Screen Parking	BrightnessContrastColor- REDColor- GREENColor- BLUE		
MENU	S	creen	NAVI
Config Option Image Screen	Horizontal Vertical Scale X Up Scale X Down		50 50 50 50

50

- DVD, DVBT, NAVI-AV, REAR, FRONT Image

Parking

Scale X Up

MENU	IMAGE Rear			
Config	Brightness		50	
Option	Contrast		50	
Image	Saturation		50	
Screen	Hue		50	
Parking	Sharpness		25	



4. OSD Menu – Parking line

%Press "MENU" button on Key board

-Parking line ON/OFF

MENU	Parking / Lin	e Display <mark>Rear</mark>
Config Option Image Screen Parking	OPS Display Line Display Warning Lang Horizontal Vertical	Off On English 50

Select a use of parking line (OSD Menu – Parking – Line display – ON or OFF)



Packing line - On

※ PIP, POP function: Press



6.5





MINI



PIP

PIP





4. OSD Menu – Parking line

%Press "MENU" button on Key board

-Setting to display screen when switching to the D gear from the R gear(p.13)



- 1. OEM type : When switching to the D gear from the R gear , Press the activated "P" button or driving up 20km to display AV/RGB/OEM screen
- Normal type : When switching to the D gear from the R gear, The AV/RGB/OEM screen is display right away 2.

-Adjusting the position of guide line

MENU	Parl	king Rear	F by	Possibl / Keypa × Pres	e to adjust 1 ad in Horizo sing this Horizo	the positi ntal / Ve ontal / Vert	on of line rtical menu ical menu	
Config Option	OPS Display Line Display	Off On		The OS Please	SD screen auto adjust from the	e parking li	isappears. ne Screen.	
Image Screen Parking	Warning Lang Horizontal Vertical	English 50 50	Μ		SEL	UP	DOWN	
				.eft	Right	Up	Down	
		- Q	GU Electro	onic			1	18

4. OSD Menu

%Press "MENU" button on Key board



MENU	Horizontal	
OSD IR-Ctrl Utility	Horizontal Vertical Display Transparency Language	50 50 10s English

- OSD Horizontal
- OSD Vertical
- OSD Display : Setting time for displaying OSD menu
- OSD Transparency
- OSD Language : Setting language of ODS menu

- IR - Ctrl (Refer to p.19)

- Utility

MENU	Utility		
OSD IR-Ctrl Utility	Factory Reset Version	Execute Cancel AD4P52KRX - 160509	

• Utility – Software version



4. OSD Menu – Register IR code

%Press "MENU" button on Key board

MENU	DVB-T(I	DMB)	DVD	
OSD IR-Ctrl Utility	DVB- T DVD DVR	Sel User Sys	Learn	Cancel

① Select IR Ctrl → DVB/DVD/DVR → Learn to register IR code

MENU	DVB-T(DMB)	DVD
OSD IR-Ctrl Utility	ALL - Clear POWER SCAN CH+ CH-	

 2 All Clear : Remove all value of Remote control registered before
 Select one of the buttons registering to move on to next step

MENU	DVB-T(DMB)		DVD	
OSD IR-Ctrl Utility	New Code : Cfm Code : Save	 Clr	Cancel	

③ Press a button on the remote control of DVD/DTV then the IR code will appear on "New code" menu. Press the same button one more time to confirm the IR code. (Cfm code = confirm code)

※ Caution

- Delete : ALL Clear – Delete all value Clr – Delete one button's Value
- Play/Pause: To use D button, Please register the IR code in power / Pause menu separately



Installation

1. Installation Diagram



GU Electronic

Installation

2. Power Installation – 6.5"



1. Disconnect the OEM power cable from t he back of command



2. Connect the offered power cable to the OEM power cable



3. Connect the offered power cable to the back of command



4. Connect the offered LVDS cable to the OEM monitor



Installation

3. Power Installation – 8.8"



1. Disconnect the OEM power cable from t he back of command



2. As the picture above, Connect the OEM Most cable to the offered power cable



2. Connect the offered power cable to the OEM power cable



4. Connect the offered LVDS cable to the OEM monitor



Caution

1. FAQ

- Not possible to switch mode
 - Check connection of OSD Key pad wire
 - Check CAN connection
- Display wrong size of picture
 Check Dip s/w setting
- Display black screen in OEM mode
 Check connection of LVDS/LCD cable
- Not possible to switch to rear screen
 Check the packing setting
 (OSD Menu option RearCam-Det)

2. Caution

- The device must not be installed in where it interferes driving (close to brake pedal, steering wheel, airbag etc.)
- LVDS cable must be connected correctly according to the manual
- Insulate the end of wire by using electrical tape
- The installation should be done by expert
- GU electronic does not take any responsibility for any problem caused by wrong installation



For your better driving