Instruction Manual GVIF PAS TDIE for TOYOTA LC200



INDEX

Specifications

1.	Main Spec	3
2.	Diagram	4
3.	Components	5
4.	Exterior	6

Settings

1.	Dip Switch	7
2.	Original button	8
3.	Key board	9
4.	OSD Menu	9

Installation

1.	Power, LVDS Connection	14
2.	Touch Connection	15
3.	Caution	16



1. Main spec.

- 1-1 Input Spec. (MULTI VIDEO INTERFACE)
 - 2 x A/V Input (External video source).
 - 1 x CVBS(REAR CAMERA) Input. (Rear camera source)
 - 1 x CVBS(FRONT CAMERA) Input. (Front camera source)
 - 1 x Analog RGB Input (Navigation System output)
 - 1 x GVIF Input. (Car Command System)
- 1-2 Output Spec.
 - 2 x CVBS Output (Video out for Installing Headrest Monitor)
 - 1 x Audio L/R Output.
 - 1 x GVIF Output (LCD Operation)
- 1-3 Power Spec.
 - Input Power : 8VDC ~ 24VDC
 - Consumption Power : 12Watt, Max
- 1-4 Switch Input mode
 - Possible to switch input mode by OEM button

2. Features

- Easy installation
- Display dynamic PAS (Parking assistance system) with PDC
- Possible to switch input mode by OEM button







INTERFACE



CAR TFT-LCD









1. KEY BOARD

* ON : DOWN , OFF : UP

NO.	Function	Selection
1	NAVIGATION	ON : Skipping NAVI OFF : Display
2	AV1 (DVB-T)	ON : Skipping DVB-T OFF : Display
3	AV2 (DVD)	ON : Skipping DVD OFF : Display
4	HDMI	ON : Skipping HDMI OFF : Display
5		
6		
7	CAR MODEL	Refer to picture
8		

* Example





2. Original button - Switching mode



NAVI BUTTON : Switching mode Other OEM BUTTON : Directly to the OEM screen



3. Key board



- ① MENU : Activating OSD Menu
- ② SEL : Selection
- **③** Up : Moving upward / increasing value
- **④** Down : Moving downward / decreasing value

4. OSD Menu

%Press "MENU" button on Key board

MENU	Config N		NAVI
Config Option Image Screen Parking	NAVI-RGB DVB-T(DMB) DVD HDMI Reset	GI5000 ELT_DVBT2 ELT_980XU Default Execute	0 Slim Cancel

Config - NAVI-RGB : Setup for the type of RGB Config - DVB-T(DMB) : Setup for the type of DVB-T(DMB) Config - DVD : Setup for the type of DVD Config - HDMI : Setup for the type of HDMI Reset : Reset all value



4. OSD Menu

%Press "MENU" button on Key board

MENU	Option		NAVI
Config	Rear Cam - Type	ExtDevice	
Option	Rear Cam - Power	Auto	
Image	Rear Cam - Det	CAN	
Screen	Front Cam -Type	ExtDevice	
Parking	Front Cam -Power	Auto	

Option

- RearCam-Type : Setup for rear camera ExtDevice - External rear camera OEM - Original camera
- RearCam-Power : Setup for Rear VCC wire in power cable ON - +12V out always (current consumption : 200mA) AUTO - +12V out in rear mode only (200mA) OFF - Power OFF
- RearCam-Det : Setup for Rear detection IE - By IE-BUS
 - Extwire by rear cam detect wire
- FrontCam-Type : Setup for front camera ExtDevice - External rear camera OEM - Original camera
- FrontCam-Power : Setup for Front VCC wire in power cable ON - +12V out always (current consumption : 200mA) AUTO - +12V out in rear mode only (200mA) OFF - Power OFF



4. OSD Menu

%Press "MENU" button on Key board

MENU	Optior	NAVI
Config Option Image Screen Parking	Front Cam - Det Rear Cam - RcvOpt AV out Reset	ExtWire Os USER Execute Cancel

Option

- FrontCam-Det : Setup for front detection ExtDevice - External rear camera OEM - Original camera
- RearCam-RcvOpt : The time of displaying front camera



- AV out : Setup for the external AV out in OEM screen AV1 : AV1's AV comes out in OEM screen AV2 : AV2's AV comes out in OEM screen USER : select one of AV out
- Reset : Reset all value



4. OSD Menu

%Press "MENU" button on Key board

- NAVI(RGB) Image / Screen

MENU	IN	MAGE NAVI
Config Option Image Screen Parking	Brightness Contrast Color- RED Color- GREEN Color- BLUE	50 50 50 50 50 50 50 25
MENU	S	creen NAVI

50

- DVD, DVBT, NAVI-AV, REAR, FRONT Image

Parking

Scale X Up

MENU	Ι	MAGE	Rear
Config Option Image Screen Parking	Brightness Contrast Saturation Hue Sharpness		50 50 50 50 50 25



4. OSD Menu – Parking mode

%Press "MENU" button on Key board

-PDC display ON/OFF

MENU	Pa	arking	Rear
Config Option Image Screen Parking	OPS Display Line Display Horizontal Vertical Space	On On	50 50 0

Selecting a use of OPS(PDC) picture (OSD Menu – Parking – OPS Display – ON or OFF)

-Parking guide line ON/OFF

MENU	Pa	arking	Rear
Config Option Image Screen Parking	OPS Display Line Display Horizontal Vertical Space	On On	50 50 0

Selecting a use of packing guide line (OSD Menu – Parking – Line display – ON or OFF)

Possible to adjust the position of line by Keypad in Horizontal / Vertical menu % Pressing this Horizontal / Vertical menu, The OSD screen automatically disappears. Please adjust from the parking line Screen.

MENU	SEL	UP	DOWN	
Left	Right	Up	Down	

-Adjusting the position of guide line

MENU	Parking		Rear
Config Option Image Screen Parking	OPS Display Line Display Horizontal Vertical Space	On On	50 50 0

-Adjusting the space of guide line

MENU	Parking		Rear
Config Option Image Screen Parking	OPS Display Line Display Horizontal Vertical Space	On On	50 50 0

Possible to adjust the space of guide line

-Adjusting the transparency of guide line

MENU	Parking		Rear
Config Option Image Screen Parking	Transparency Reset	Execute	40 Cancel

Possible to adjust the transparency of guide line



Installation

1. Power, LVDS connection





Installation

2. Touch connection

Backside of Monitor





Caution

1. FAQ

- Not possible to switch mode
 - Check connection of OSD Key pad wire
 - Check CAN connection
- Display wrong size of picture
 Check Dip s/w setting
- Display black screen in OEM mode
 Check connection of LVDS/LCD cable
- Not possible to switch to rear screen
 Check the packing setting
 (OSD Menu option RearCam-Det)

2. Caution

- The device must not be installed in where it interferes driving (close to brake pedal, steering wheel, airbag etc.)
- LVDS cable must be connected correctly according to the manual
- Insulate the end of wire by using electrical tape
- The installation should be done by expert
- GU electronic does not take any responsibility for any problem caused by wrong installation



For your better driving